



CLASSIC Bypass Door Frame

GENERAL INSTALLATION INSTRUCTIONS

NOTE: PARTIAL HEIGHT HEAD CONDITION ABUTTS WALL


1. INSTALL PR-1A JAMBS. ATTACH TO WALL USING COMMERCIAL GRADE CONSTRUCTION ADHESIVE.

2. INSTALL HEAD TRACK (PR-1A) TO FINISH OPENING SIZE. ATTACH TO STRUCTURE SUPPORT ABOVE.


PLACE EH773 ROLLERS INTO THE SL-3BP ROLLER TRACKS. ATTACH THE ROLLER TRACK AT 12" ON CENTER.

3. INSTALL MF431 FLOOR GUIDE


4. HANG AND ADJUST DOOR.

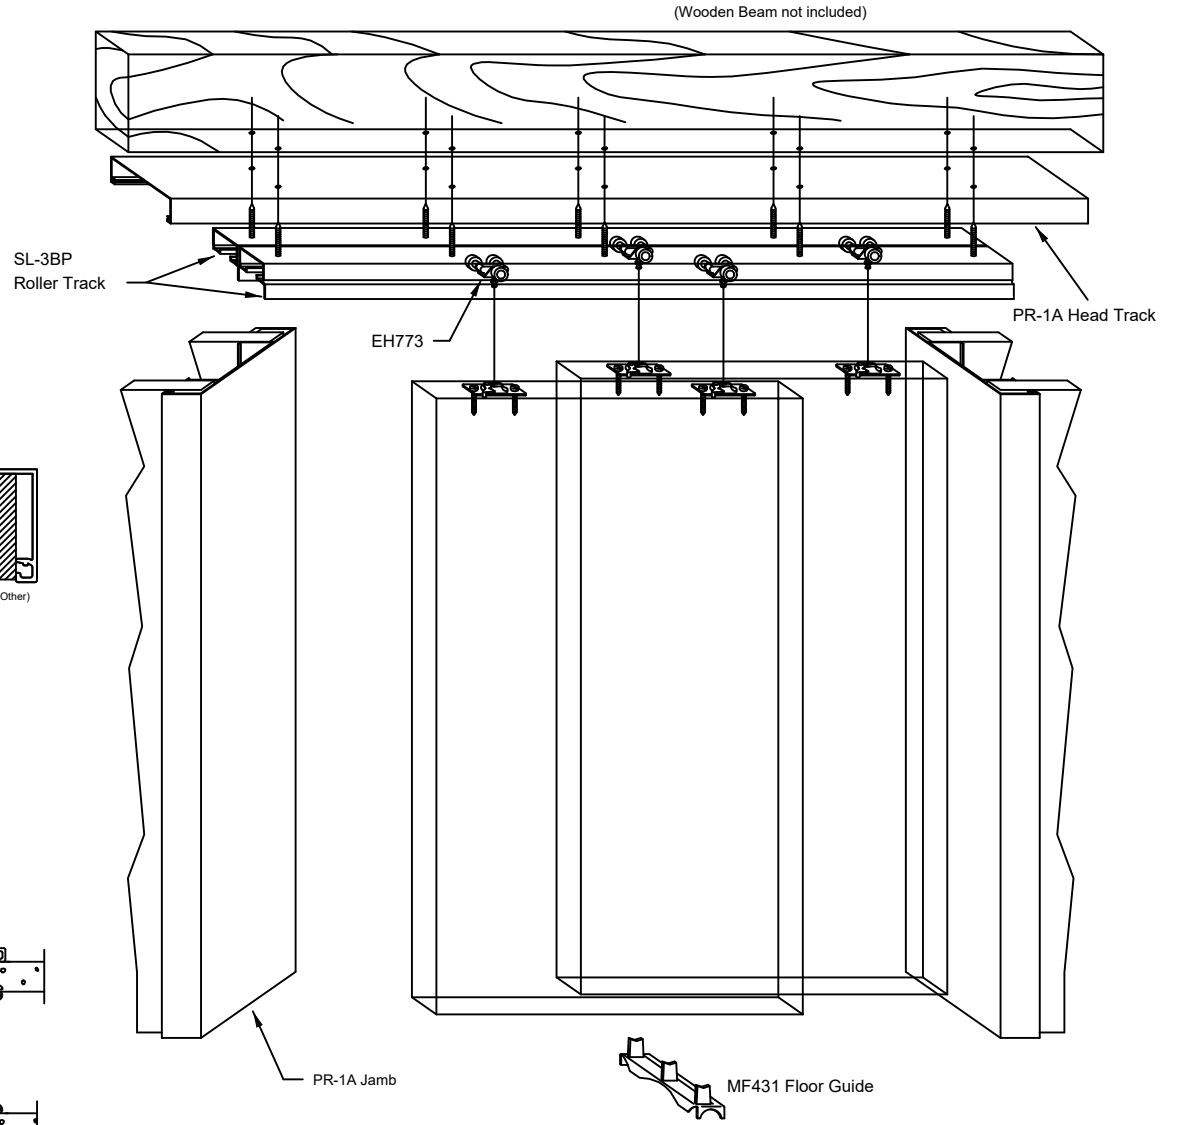

487 HEAD DETAIL

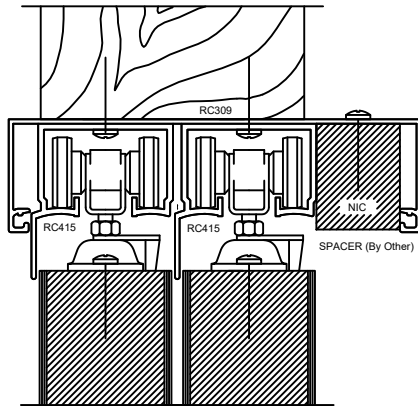


375 HEAD DETAIL

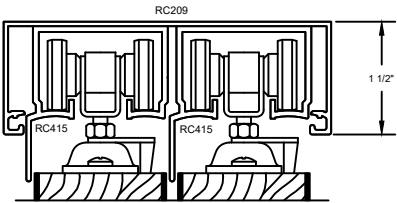

ROUGH OPENING
CASED OPENING + 1/8"

PLAN VIEW

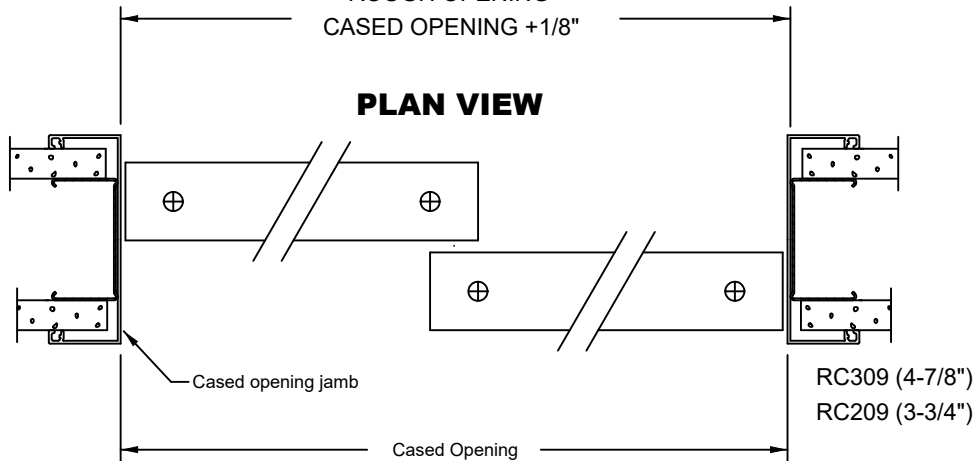

Revised 3/5/2020

NOT TO SCALE