





# SOLUTIONS II Offset Slider Over Drywall Installation Instructions

**FRAME MUST BE INSTALLED PLUMB AND SQUARE**

## General Installation Guidelines


1. CHECK CASED OPENING FOR PLUMB, LEVEL, AND SQUARE
2. ATTACH TRACK SUPPORT TO INSIDE OF THE CASED OPENING HEADER
3. PLUMB VERTICALS, CASE OPENING JAMBS, TO BOTH SIDE OF CASED OPENING
4. INSTALL CASED OPENING HEADER WITH RA108 CLIPS
5. ATTACH TRIM CLIP TO WALL IN LINE WITH TRIM NIBS ON CASED OPENING HEADER
6. ATTACH RN456 TRACK AT CASED OPENING HEADER AND TRIM CLIP AND SUPPORT RN456 TRACK WITH MIN. (3) RA405 CLIPS ON DRYWALL
7. SCREW RN456 TO TRACK SUPPORT WITH ST137 SCREWS - CLEAN TRACK OF DEBRIS WHEN FINISHED
8. INSTALL ROLLER HARDWARE IN TRACK (ROLLERS AND BUMPER STOPS)
9. ATTACH RECEIVER TO UNIT ON DOOR SIDE
10. APPLY TRIM TO UNIT
11. HANG DOOR
  - A ATTACH FLOOR GUIDE TO THE BOTTOM OF THE CASED OPENING
  - B GUIDE SHOULD BE ATTACHED ON THE DOOR SIDE
  - C INSTALL TRACK END CAP AT END OF TRACK

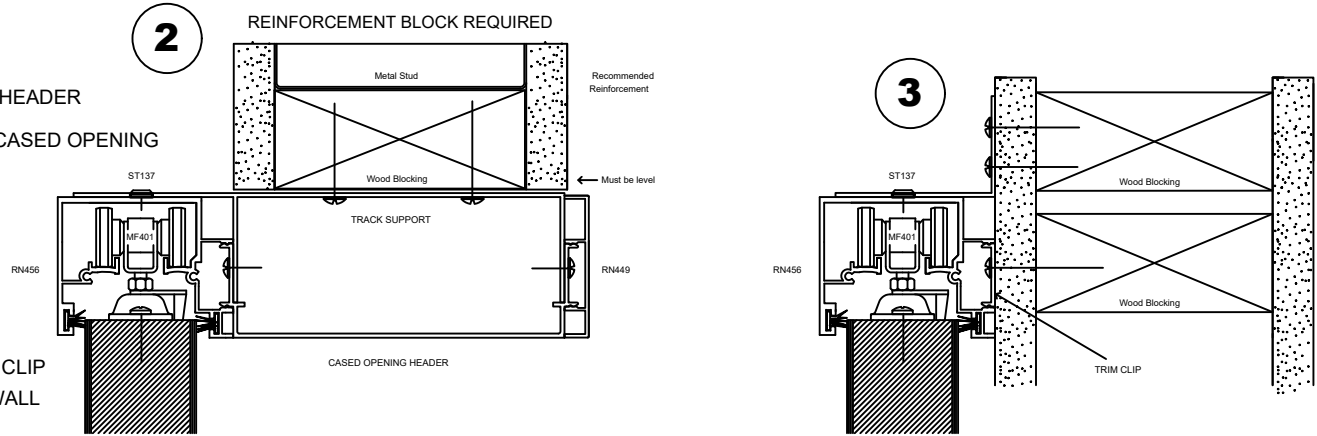


DOOR / ROLLERS

WOOD DOOR ROLLER BRACKET PLACEMENT:


Place hanger bracket at edge of door, 2" from edge of door to C/L of bracket.

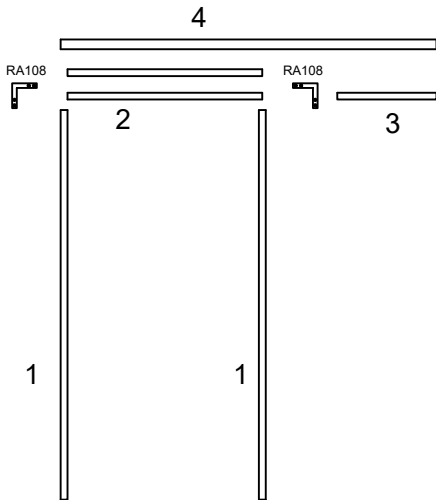


ST137



FLOOR GUIDE

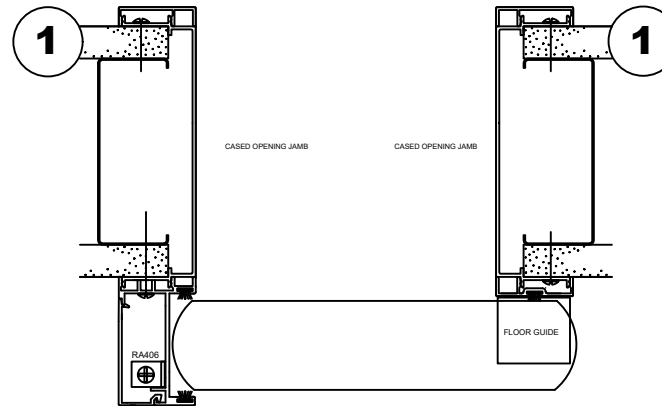

RA405

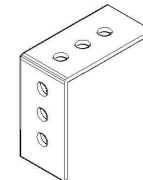

ROUGH OPENING WIDTH = DOOR OPENING WIDTH + 1-1/2"

ROUGH OPENING HEIGHT = OUTSIDE FRAME DIMENSION

NOT TO SCALE