Parallel Arm Closure Spacer

General Installation Guidelines

FRAME MUST BE INSTALLED PLUMB, LEVEL AND SQUARE

RACO

Spacer Detail Guide

1. Determine the location for the PA bracket on frame header and mark the C/L.

2. Remove the supplied PA bracket support channel and screws from the bag supplied by RACO.

3. Place channel, as shown, against the back of the frame doorstop. Align the C/L of channel with mark for C/L of location for PA bracket and install the channel using the 2 supplied wafer head Tek screws. Screw into the side of the frame door stop as shown and tighten. Make sure to use an extended Phillips tip to ensure the screw gun does not damage the face of the frame.

(6 inch extended screw tip recommended.)

4. Align the PA bracket on top of the frame doorstop and applied channel. See diagram. Install with screws supplied with PA closure hardware. Tighten but do not overtighten to avoid stripping out threads in frame.

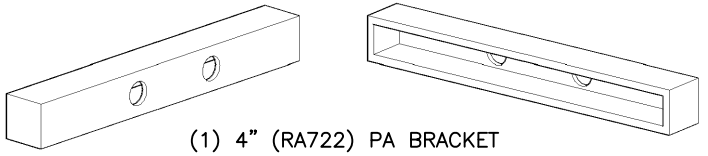

(1) 4" (RA722) PA BRACKET

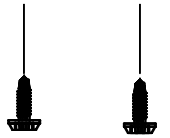

(2) (ST010) SCREWS

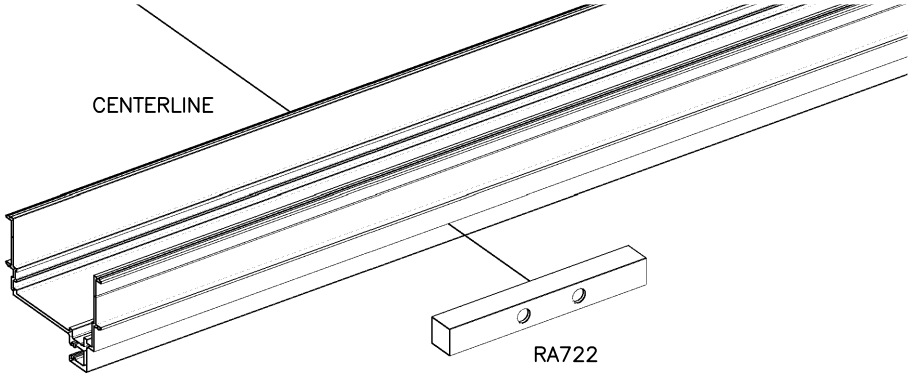

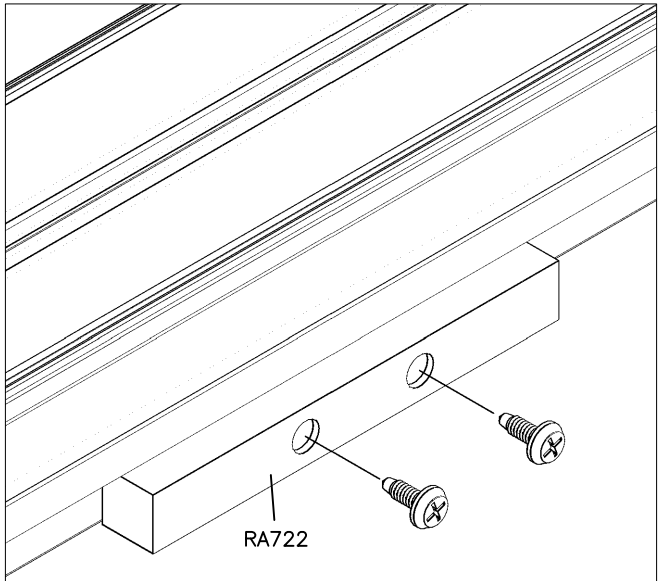

PA bracket screwed flush into door stop

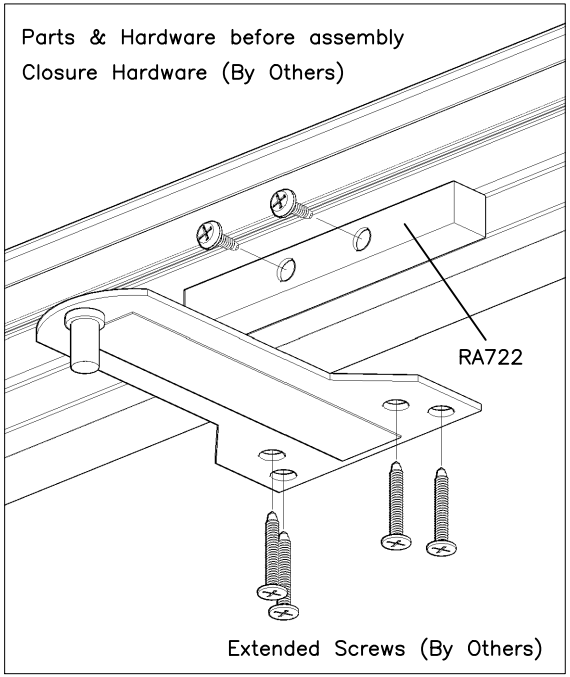

Extended Screws (By Others)

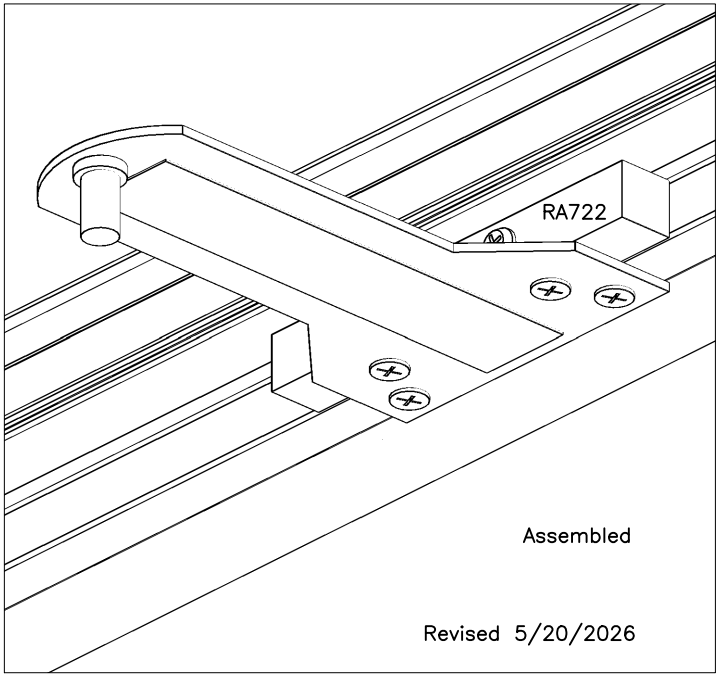

Assembled

Revised 5/20/2026