Rim Panic Device Spacer

General Installation Guidelines

FRAME MUST BE INSTALLED PLUMB, LEVEL AND SQUARE

RACO

Spacer Detail Guide

1. Determine the location for the Rim Panic bracket on frame strike jamb and mark the C/L.

2. Remove the supplied Rim Panic bracket support channel and screws from the bag supplied by RACO.

3. Place channel, as shown, against the back of the frame doorstop. Align the C/L of channel with mark for C/L of location for Rim Panic bracket and install the channel using the 2 supplied flat head Tek screws. Screw into the side of the frame door stop as shown and tighten. Make sure to use an extended Phillips tip to ensure the screw gun does not damage the face of the frame.

(6 inch extended screw tip recommended.)

4. Align the Rim Panic bracket on top of the frame doorstop and applied channel. See diagram. Install with screws supplied with PA closure hardware. Tighten but do not over tighten to avoid stripping out threads in frame.

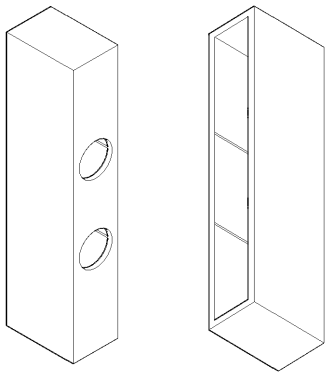

(1) 4" (RA721) PA BRACKET
(2) FLAT HEAD SCREWS

Parts & Hardware before assembly
Rim Panic (By Others)

Assembled

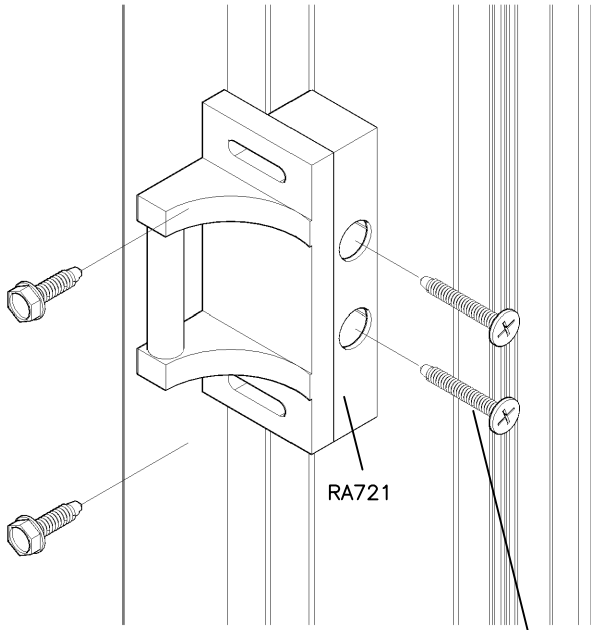

Identify Centerline

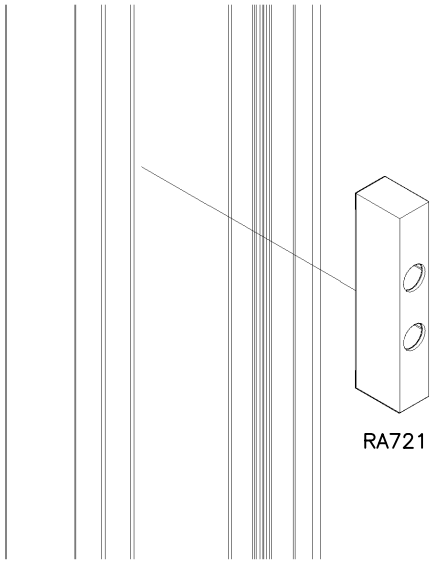

Rim Panic Spacer flush to door stop

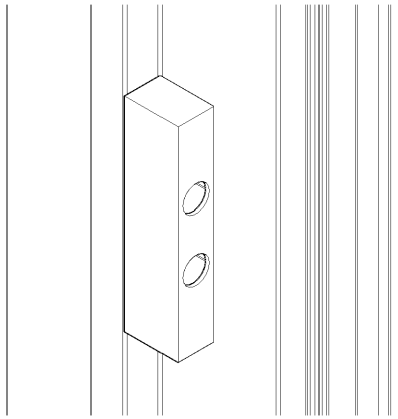

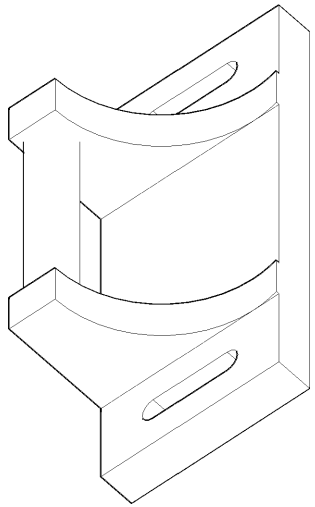

Rim Panic Device (by Others)

Revised 5/20/2026